



# FilmTec<sup>™</sup> Membranes

# FilmTec<sup>™</sup> Seawater RO Elements for Commercial Systems

# **Description**

Improved FilmTec™ Seawater Reverse Osmosis Elements offer the highest productivity while maintaining excellent salt rejection.


- FilmTec™ SW30 Membrane Elements have the highest flow rates available to meet the water demands of both sea-based and land-based desalinators.
- FilmTec™ SW30 Elements may also be operated at lower pressure to reduce pump size, cost and operating expenses.
- Improved FilmTec<sup>™</sup> seawater membrane combined with automated, precision element fabrication result in the most consistent product performance available

# **Typical Properties**

Product	Part Number	Applied Pressure psig (bar)	Permeate Flow Rate gpd (m³/d)	Stabilized Salt Rejection (%)	MinimumSalt Rejections (%)
SW30-2514	80733	800 (55)	150 (0.6)	99.4	99.4
SW30-2521	80734	800 (55)	300 (1.1)	99.4	99.4
SW30-2540	12082989	800 (55)	700 (2.6)	99.7	99.5
SW30-4021	80740	800 (55)	800 (3.0)	99.4	99.2
SW30-4040	12082966	800 (55)	1,950 (7.4)	99.7	99.5

<sup>1.</sup> Permeate flow and salt rejection based on the following test conditions: 32,000 ppm NaCl, pressure specified above, 77°F (25°C) and the following recovery rates: SW30-2514 - 2%, SW30-2521 & SW30-4021 - 5%, SW30-2540 & SW30-4040 - 8%.

#### **Element Dimensions**

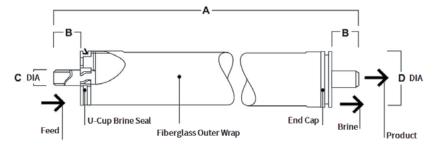



FilmTec™ coupler part number 89055 is ordered separately for each element. Each coupler includes two 2-210 EPR O-rings (part number 89255).

<sup>2.</sup> Permeate flows for individual elements may vary +/-20%.

<sup>3.</sup> For the purpose of improvement, specifications may be updated periodically.

		Maximum Feed Flow Rate	Dime	nsions – Inches (mm)		1 inch = 25.4 mm
	Product	gpm (m³/h)	Α	В	С	D
Small commercial	SW30-2514	6 (1.4)	14.0 (356)	1.19 (30.2)	0.75 (19)	2.4 (61)
	SW30-2521	6 (1.4)	21.0 (533)	1.19 (30.2)	0.75 (19)	2.4 (61)
	SW30-4021	16 (3.6)	21.0 (533)	1.05 (26.7)	0.75 (19)	3.9 (99)
		Maximum Feed Flow Rate	Dime	nsions – Inches (mm)		1 inch = 25.4 mm
	Product	gpm (m³/h)	A	В	С	D
Large commercial	SW30-2540	6 (1.4)	40.0 (1,016)	1.19 (30.2)	0.75 (19)	2.4 (61)
	SW30-4040	16 (3.6)	40.0 (1,016)	1.05 (26.7)	0.75 (19)	3.9 (99)

- 1. Refer to <u>FilmTec™ Design Guidelines for multiple-element systems of midsize elements</u> (Form No. 45-D01588-en).
- 2. SW30-2514, SW30-2521 and SW30-2540 Elements fit nominal 2.5-inch I.D. pressure vessels. SW30-4021 and SW30-4040 Elements fit nominal 4-inch I.D. pressure vessel.

## **Operating and Cleaning Limits**

Membrane Type	Polyamide Thin-Film Composite		
Maximum Operating Temperature	113°F (45°C)		
Maximum Operating Pressure	1,200 psi (83 bar)		
Maximum Pressure Drop	15 psig (1.0 bar)		
pH Range Continuous Operation <sup>a</sup> Short-Term Cleaning <sup>b</sup>	2 - 11 1 - 13		
Maximum Feed Silt Density Index	SDI 5		
Free Chlorine Tolerance <sup>c</sup>	<0.1 ppm		

- a. Maximum temperature for continuous operation above pH 10 is 95°F (35°C).
- b. Refer to FilmTec™ Cleaning Guidelines (Form No. 45-D01696-en).
- c. Under certain conditions, the presence of free chlorine and other oxidizing agents will cause premature membrane failure. Since oxidation damage is not covered under warranty DuPont Water Solutions recommends removing residual free chlorine by pretreatment prior to membrane exposure. Please refer to <a href="Dechlorinating Feedwater">Dechlorinating Feedwater</a> (Form No. 45-D01569-en) for more information.

#### **Important Information**

Proper start-up of reverse osmosis water treatment systems is essential to prepare the membranes for operating service and to prevent membrane damage due to overfeeding or hydraulic shock. Following the proper start-up sequence also helps ensure that system operating parameters conform to design specifications so that system water quality and productivity goals can be achieved.

Before initiating system start-up procedures, membrane pretreatment, loading of the membrane elements, instrument calibration and other system checks should be completed.

Please refer to the application information literature entitled <u>Start-Up Sequence</u> (Form No. 45-D01609-en) for more information.

# **Operation Guidelines**

Avoid any abrupt pressure or cross-flow variations on the spiral elements during startup, shutdown, cleaning or other sequences to prevent possible membrane damage. During start-up, a gradual change from a standstill to operating state is recommended as follows:

- Feed pressure should be increased gradually over a 30-60 second time frame.
- Cross-flow velocity at set operating point should be achieved gradually over 15-20 seconds:

#### **General Information**

- · Keep elements moist at all times after initial wetting.
- If operating limits and guidelines given in this bulletin are not strictly followed, the limited warranty will be null and void.
- To prevent biological growth during prolonged system shutdowns, it is recommended that membrane elements be immersed in a preservative solution.
- The customer is fully responsible for the effects of incompatible chemicals and lubricants on elements.
- Maximum pressure drop across an entire pressure vessel (housing) is 50 psi (3.4 bar).
- · Avoid static permeate-side backpressure at all times.

### **Product Stewardship**

DuPont has a fundamental concern for all who make, distribute, and use its products, and for the environment in which we live. This concern is the basis for our product stewardship philosophy by which we assess the safety, health, and environmental information on our products and then take appropriate steps to protect employee and public health and our environment. The success of our product stewardship program rests with each and every individual involved with DuPont products—from the initial concept and research, to manufacture, use, sale, disposal, and recycle of each product.

#### **Customer Notice**

DuPont strongly encourages its customers to review both their manufacturing processes and their applications of DuPont products from the standpoint of human health and environmental quality to ensure that DuPont products are not used in ways for which they are not intended or tested. DuPont personnel are available to answer your questions and to provide reasonable technical support. DuPont product literature, including safety data sheets, should be consulted prior to use of DuPont products. Current safety data sheets are available from DuPont.

Please be aware of the following:

- The use of this product in and of itself does not necessarily guarantee the removal of cysts and pathogens from water.
  Effective cyst and pathogen reduction is dependent on the complete system design and on the operation and maintenance of the system.
- Permeate obtained from the first hour of operation should be discarded.

