

DuPont™ Kalrez® MS220

Perfluoroelastomer Parts

Technical Information — June 2018

Product Description

DuPont™ Kalrez® MS220 perfluoroelastomer parts are designed for mechanical seals where superior chemical resistance and low compression set are critical for successful sealing performance.

Kalrez® MS220 continues the DuPont tradition of providing high value in use perfluoroelastomer parts to extend equipment mean time between repair (MTBR), while offering an excellent combination of properties (resistance to steam, acids and bases) at temperatures up to 230°C (446°F).

It is an effective alternative to other general purpose competitive perfluoroelastomers (see table 2) and is the product of choice for high volume O-rings.

Table 1: Typical Physical Properties¹

| | |
|--|-----------------------------|
| Color | Black |
| Maximum Application Temperature ² , °C (°F) | 230 (446) |
| Durometer, Shore A ³ | 76 |
| 100% Modulus ⁴ , MPa (psi) | 6.93 (1005) |
| Tensile Strength at Break ⁴ , MPa (psi) | 15.93 (2310) |
| Elongation at Break ⁴ , % | 154 |
| Compression Set ⁵ , 70 hr at 204 °C (400 °F) | 24 |
| Low Temperature Sealing ² , °C (°F) | -14 (6) |
| Linear Coefficient of Thermal Expansion ² , °C (°F) | 3.85 x 10E-4 (2.14 x 10E-4) |

¹ Not to be used for specification purposes

² DuPont proprietary test method

³ ASTM D2240 (plied sheet test specimen)

⁴ ASTM D412, 500 mm/min (AS568 K214 O-ring test specimens)

⁵ ASTM D395B (AS568 K214 O-ring test specimens)

Chemical Resistance

Integrity of seal properties is closely associated with low elastomer swell. Excessive swell may cause seal damage, extrusion, leaks and other failures due to equipment malfunction. Assuming proper seal design, low volume swell can be a reliable predictor of elastomer seal performance in mechanical seal applications.

The following data is the result of lab compatibility testing to determine the volume swell of Kalrez® MS220 parts when exposed to various fluids. The chemicals represent some of the most aggressive substances in industrial applications. Additional physical property testing may be needed to further define product performance. Because every application is unique, it is strongly recommended that immersion testing be performed in the actual composition of the process fluids.



The miracles of science™

Table 2: Comparison of Volume Swell* (% Change) between MS220 and nearest competitive FFKM after 672 hours immersion


| Fluid | Temperature °C (°F) | MS220 | Nearest competitive FFKM A-1 |
|------------------------|---------------------|-------|------------------------------|
| Steam | 225 (437) | A | NR |
| Nitric Acid (70%) | 85 (185) | A | C |
| Butyraldehyde, | 70 (158) | B | B |
| Sulfuric Acid (96-98%) | 150 (302) | A | C |
| Glacial Acetic Acid | 100 (212) | A | A |
| Ammonium Hydroxide | 100 (212) | B | B |
| Ethylenediamine | 90 (194) | C | C |
| 1,2 Dichloroethane | 100 (212) | A | NR |
| Methanol | 100 (212) | A | NR |
| Toluene | 100 (212) | A | A |
| HCFC | 25 (77) | A | NR |

*AS568 K214 O-ring test specimens.

Volume swell rating: A= 0-10%, B= 10-20%, C= >20%, NR= No Rating Available

Thermal Resistance

One method of predicting heat resistance is compression set. This is defined as the percentage by which a standard test piece (typically an O-ring or a pellet) fails to return to its original thickness after being subjected to a standard compressive load or deflection and temperature for a fixed period of time. This chart shows some elastomer comparisons with regard to compression set resistance (ASTM D395 Method B).

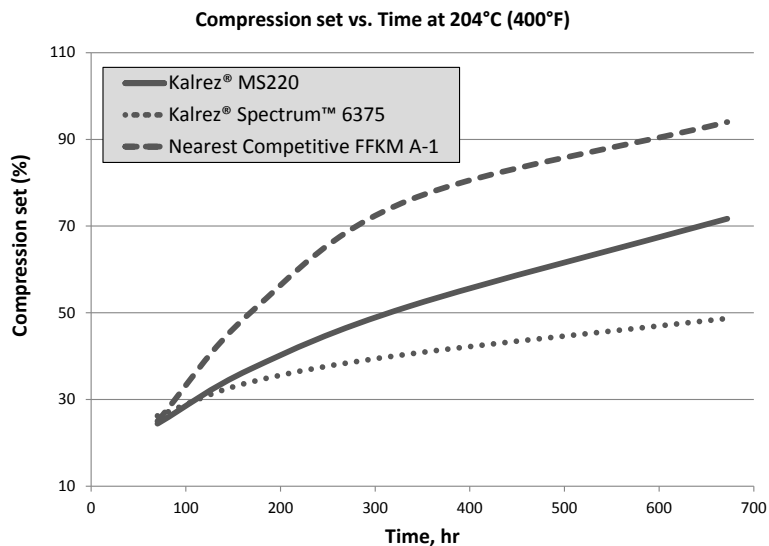

Visit us at kalrez.dupont.com or vespel.dupont.com

Contact DuPont at the following regional locations:

North America
800-222-8377

Latin America
+0800 17 17 15

Europe, Middle East, Africa
+41 22 717 51 11

Greater China
+86-400-8851-888

ASEAN
+65-6586-3688

Japan
+81-3-5521-8484

The information provided in this data sheet corresponds to our knowledge on the subject at the date of its publication. This information may be subject to revision as new knowledge and experience becomes available. The data provided fall within the normal range of product properties and relate only to the specific material designated; these data may not be valid for such material used in combination with any other materials, additives or pigments or in any process, unless expressly indicated otherwise.

The data provided should not be used to establish specification limits or used alone as the basis of design; they are not intended to substitute for any testing you may need to conduct to determine for yourself the suitability of a specific material for your particular purposes. Since DuPont cannot anticipate all variations in actual end-use and disposal conditions, DuPont does not guarantee favorable results, makes no warranties and assumes no liability in connection with any use of this information. All such information is given and accepted at the buyer's risk. It is intended for use by persons having technical skill, at their own discretion and risk. Nothing in this publication is to be considered as a license to operate under or a recommendation to infringe any patent. DuPont advises you to seek independent counsel for a freedom to practice opinion on the intended application or end-use of our products.

CAUTION: Do not use DuPont materials in medical applications involving implantation in the human body or contact with internal body fluids or tissues unless the material has been provided from DuPont under a written contract that is consistent with DuPont policy regarding medical applications and expressly acknowledges the contemplated use. For further information, please contact your DuPont representative. You may also request a copy of DuPont POLICY Regarding Medical Applications and DuPont CAUTION Regarding Medical Application.

Copyright © 2014 DuPont. The DuPont Oval Logo, DuPont™, The miracles of science™, Kalrez®, and Vespel® are trademarks or registered trademarks of E.I. du Pont de Nemours and Company or its affiliates. All rights reserved.

(03/13) Reference No. KZE-A11073-00-C0518



The miracles of science™