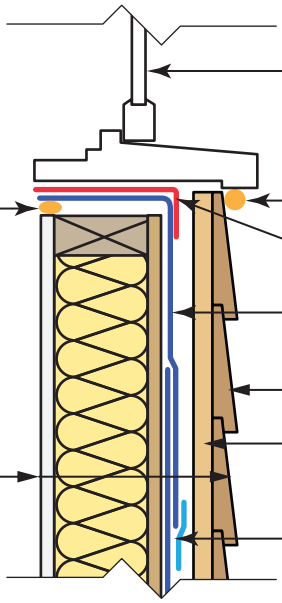

WINDOW WITH INTEGRAL MOUNTING FLANGE

INSTALL TOWER® RESIDENTIAL SEALANT OR RECOMMENDED SEALANT (AND BACKER ROD AS NECESSARY) AROUND THE WINDOW OPENING AT THE INTERIOR. IT IS ALSO ACCEPTABLE TO USE **GREAT STUFF PRO™ WINDOW & DOOR POLYURETHANE FOAM SEALANT**, OR RECOMMENDED FOAM

SEALANT

DUPONT™ FLEXWRAP™

WRAP **DUPONT™ TYVEK® WRB**[1] INTO OPENING

WOOD SIDING

WOOD FURRING STRIPS, ALIGNED WITH STUDS

TYPICAL WALL ASSEMBLY

WOOD SIDING

WOOD FURRING

TYVEK® WRB[1]

OSB SHEATHING

WOOD STUDS w/ BATT INSULATION

VAPOR RETARDER[2]

GYPSUM BOARD

LAP AND TAPE WITH **DUPONT™TYVEK® TAPE** AT JOINTS (UPPER SHEET OVER LOWER SHEET)

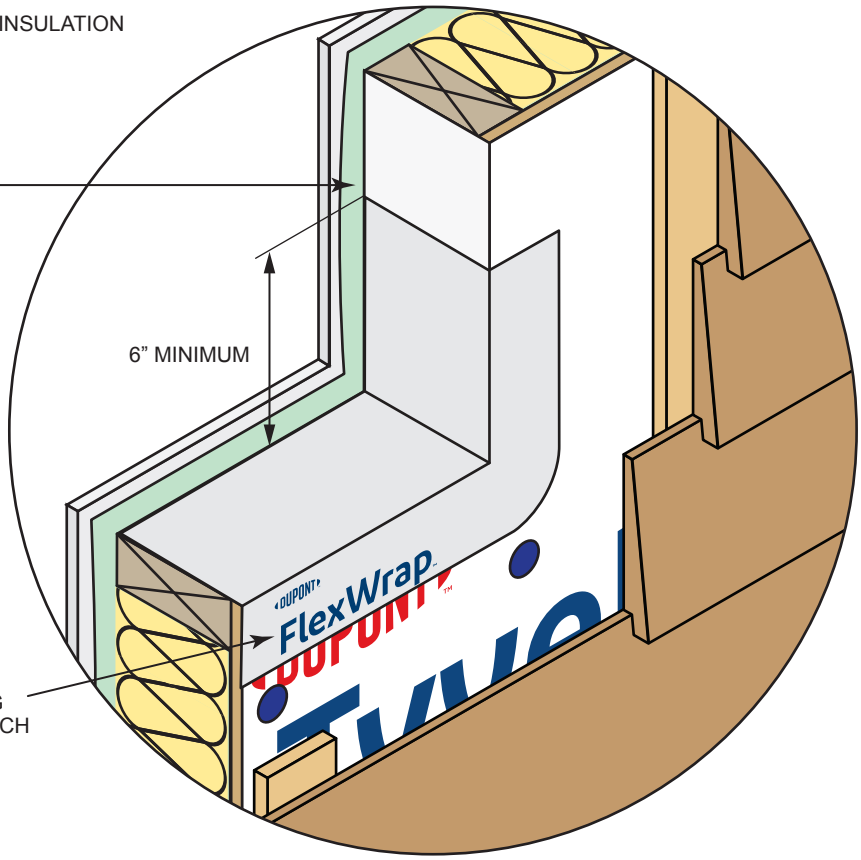

VAPOR RETARDER* (WHERE REQUIRED)[2]

6" MINIMUM

INSTALL **FLEXWRAP™** ALONG ENTIRE SILL AND UP 6" OF EACH JAMB OF ROUGH OPENING

[1]REFER TO THE *FACADE CONSIDERATIONS* SECTION OF THE APPLICABLE DUPONT INSTALLATION GUIDELINES TO HELP DETERMINE THE APPROPRIATE **TYVEK® WRB** FOR THE CLADDING TYPE.

[2]USE OF INTERIOR VAPOR RETARDER IS DEPENDENT UPON CLIMATE ZONE AND LOCAL BUILDING CODES AND LAWS. CONSULT LOCAL JURISDICTION TO ENSURE APPROPRIATE USE OF VAPOR RETARDERS IN WALL ASSEMBLY.

NOTES:

- TAPE ALL **TYVEK® WRB** SEAMS WITH **DUPONT™ TYVEK® TAPE**.
- FLASH ALL PENETRATIONS WITH **DUPONT SELF-ADHERED FLASHING PRODUCTS**.
- FASTEN **TYVEK® WRB** TO SHEATHING WITH APPROVED FASTENERS AND CORRECT SPACING OF WRAP CAP STAPLES/NAILS (ex. **DUPONT™ TYVEK® WRAP CAP FASTENERS**).
- DO NOT APPLY **TYVEK® TAPE** OR **DUPONT SELF-ADHERED FLASHING PRODUCTS** OVER **TYVEK® WRAP CAP FASTENERS**, OR RECOMMENDED FASTENERS: HOWEVER, FASTENERS CAN BE INSTALLED OVER THE FLASHING.
- LOCAL LAWS, ZONING, AND BUILDING CODES VARY AND THEREFORE GOVERNS OVER MATERIAL SELECTION (ex. SHEATHING TYPE, FRAMING SIZE, INSULATION THICKNESS, ETC.) DETAILING SHOWN ABOVE.

SCALE: NOT TO SCALE	WINDOW SILL DETAIL
REVISION DATE: 4/19/2022	RESIDENTIAL WOOD FRAME STRUCTURE w/ WOOD SIDING
DRAWING: A26	

DUPONT™ Tyvek®