

# DuPont™ Kalrez® Perfluoroelastomer Parts

## Radiation Resistance


### Radiation Resistance of DuPont™ Kalrez® perfluoroelastomer parts

The following guidelines and definitions are useful in understanding radiation resistance:

- Radiation can be defined as the transmission of high energy waves or particles through space or through a material medium. Energy absorption by the material may produce a variety of effects such as cross-linking and degradation. Excessive energy absorption usually results in adverse properties, i.e., failure of the substance by embrittlement due to over cross-linking or reversion (degradation) caused by chain cleavage
- Gamma radiation may be considered typical of the type to which elastomers would be subjected and is used in most of the laboratory radiation studies
- Radiation dose is expressed as rads. One rad is the dose that produces an energy absorption of 100 erg/g in 1 cm<sup>3</sup> of air at standard temperature and pressure. 10<sup>6</sup> rad = 1 Mrad
- In general, radiation doses are additive. A material can be assumed to have a “perfect memory” with regard to radiation exposures. Thus, ten exposures of 10<sup>4</sup> rad are equivalent to one exposure of 10<sup>5</sup> rad
- Concerning elastomer serviceability, a Gamma radiation dose less than 5 x 10<sup>6</sup> rad is considered low. Up to 10<sup>8</sup> is considered intermediate and 10<sup>8</sup> to 10<sup>9</sup> is high

DuPont™ Kalrez® parts can withstand 1 Mrad (10<sup>6</sup> rad) with little effect on physical properties. Exposure to 10 Mrad (10<sup>7</sup> rad) produces moderate effect with 40% loss of tensile strength and 25% loss of elongation at break. At 100 Mrad (10<sup>8</sup> rad), there is a severe effect with 80% loss of tensile strength and 80% loss of elongation. The accompanying graphs detail Kalrez® performance up to 100 Mrad.

Other factors need to be evaluated in addition to radiation exposure. The effects of fluids and the operating temperature to which the elastomers are exposed should be determined. Kalrez® parts have excellent high temperature and fluid resistance and should be evaluated for the environment as well as radiation resistance.

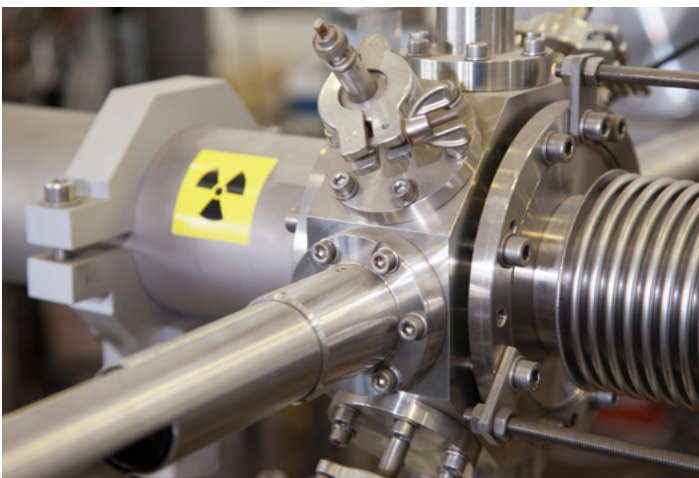


Kalrez® parts used in an ION accelerator



MRI Scanners require radiation-resistant seals

## Radiation Results

Electron Radiation Source, G.E. Resonate Beam, Transformer  $2 \times 10^6$ V, mA

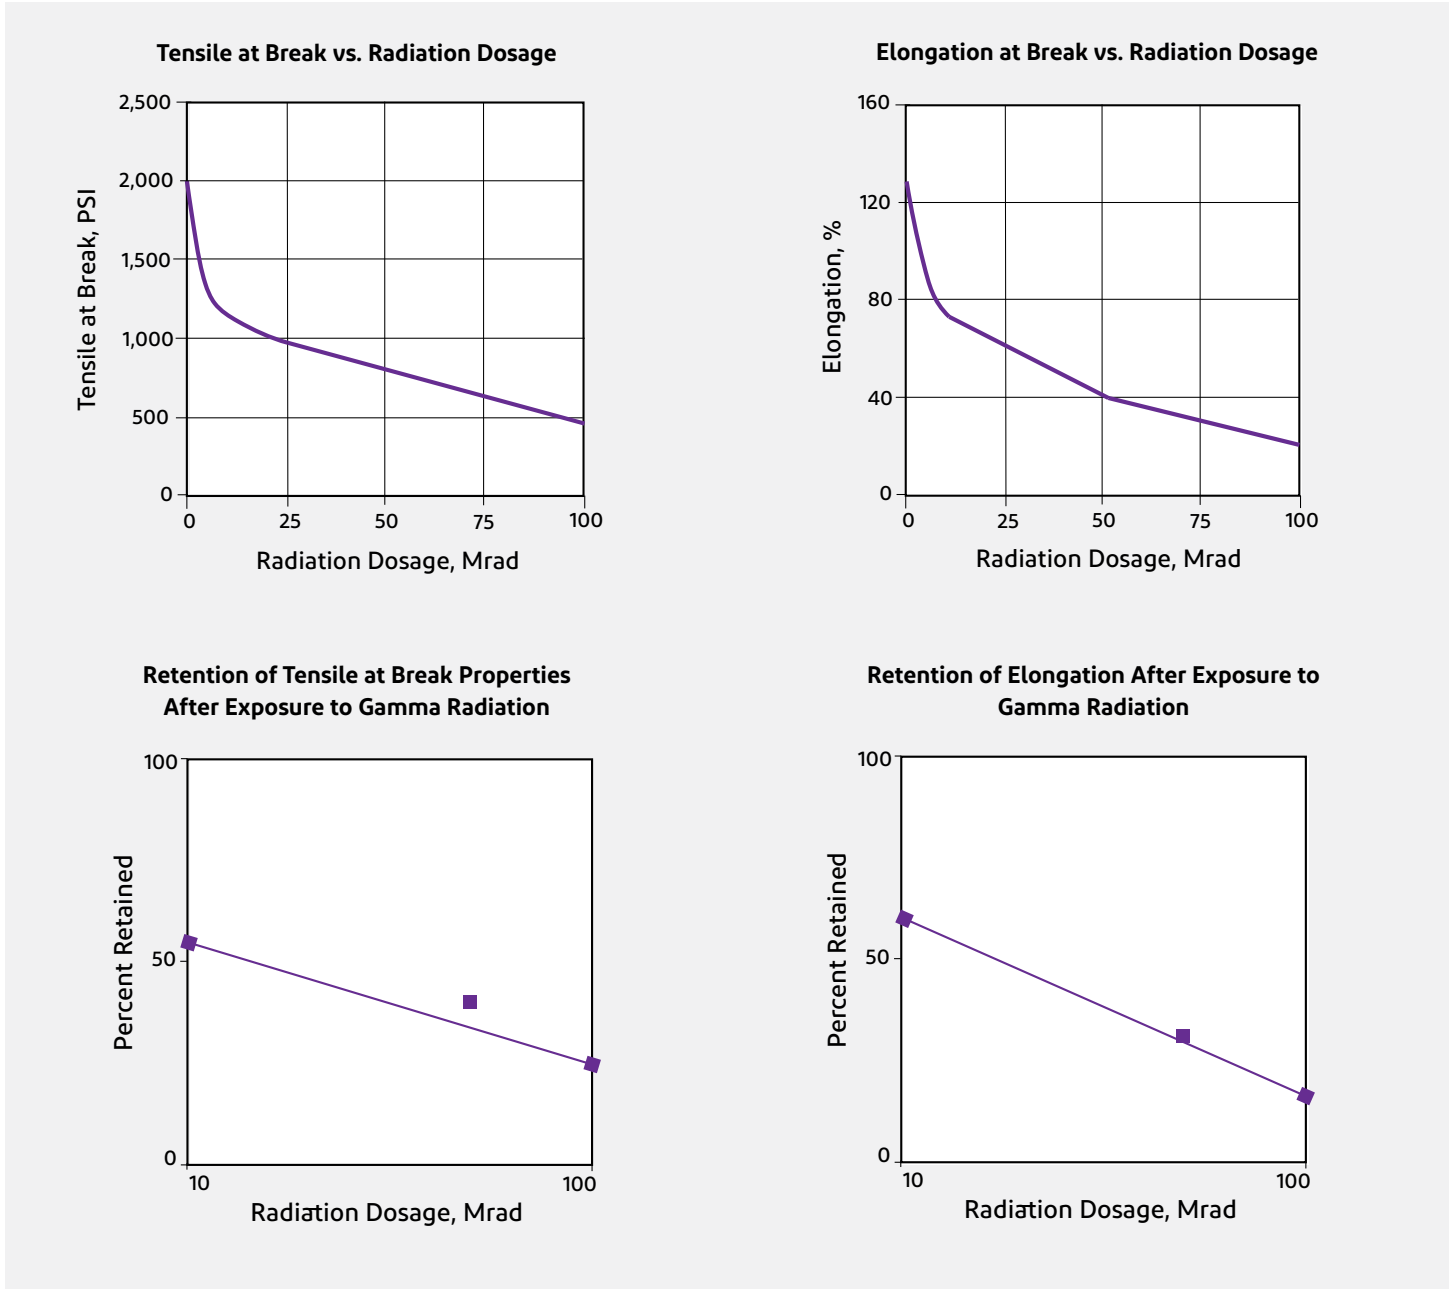

Visit us at [kalrez.com](http://kalrez.com)

The information set forth herein is furnished free of charge, is based on technical data that DuPont believes to be reliable and represents typical values that fall within the normal range of properties. This information relates only to the specific material designated and may not be valid for such material used in combination with other materials or in other processes. It is intended for use by persons having technical skill, at their own discretion and risk. This information should not be used to establish specification limits nor used alone as the basis of design. Handling precaution information is given with the understanding that those using it will satisfy themselves that their conditions of use present no health or safety hazards and comply with applicable law. Since conditions of product use and disposal are outside our control, we make no warranties, express or implied, and assume no liability in connection with any use of this information. As with any product, evaluation under end use conditions prior to specification is essential. Nothing herein is to be taken as a license to operate or a recommendation to infringe on patents.

**CAUTION:** Do not use DuPont materials in medical applications involving implantation in the human body or contact with internal body fluids or tissues unless the material has been provided from DuPont under a written contract that is consistent with the DuPont policy regarding medical applications and expressly acknowledges the contemplated use. For further information, please contact your DuPont representative.

DuPont's sole warranty is that our products will meet our standard sales specifications in effect at the time of shipment. Your exclusive remedy for breach of such warranty is limited to refund of purchase price or replacement of any product shown to be other than as warranted. TO THE FULLEST EXTENT PERMITTED BY APPLICABLE LAW, DUPONT SPECIFICALLY DISCLAIMS ANY OTHER EXPRESS OR IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, MERCHANTABILITY, OR NON-INFRINGEMENT. DUPONT DISCLAIMS LIABILITY FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES.

DuPont™, the DuPont Oval Logo, and all trademarks and service marks denoted with ™, SM or ® are owned by affiliates of DuPont de Nemours, Inc. unless otherwise noted. © 2022 DuPont. All rights reserved.



[dupont.com](http://dupont.com)

Form No. KZE-H68249-00-C 0822 CDP