



FilmTec™ Hypershell™ HTRO-8038/48 and FilmTec™ Hypershell™ HTRO-4040/48 Elements

Sanitary High Temperature Reverse Osmosis Elements for Food & Beverage Processing

Key Features

- Operating temperatures up to 80°C, enabling reduced OPEX and CAPEX by requiring smaller or no cooling and heating systems.
- Robust FilmTec™ RO flat sheet to withstand extreme conditions.
- More efficient cleaning than standard mesh wrap elements, reducing CIP chemicals and water usage.

Key Applications

- Sugar concentration
- Beverage concentration
- Hot evaporator condensate reuse



Feed Flow vs Pressure Drop

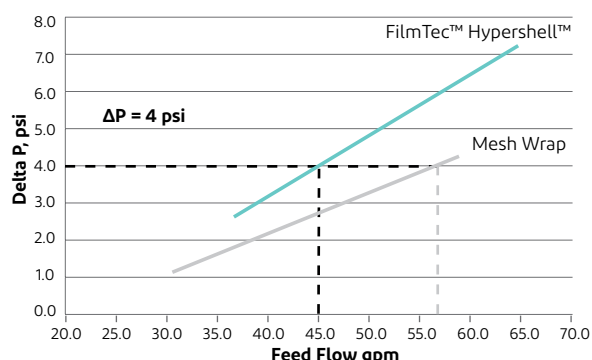


Figure 1: Feed Flow vs Pressure Drop for Mesh Wrap and FilmTec™ Hypershell™ 8038 Elements.

FilmTec™ Hypershell™ Elements have less exterior bypassing and require approximately 30% less flow than mesh wrap for an equivalent pressure drop.

The graph indicates the flow comparison at 4psi ΔP. Energy can be saved by reducing flow.


Typical Properties

Product	Active Area ft² (m²)	Feed Spacer Thickness (mil)	Max. recirculation cross-flow gpm (m³/h)
FilmTec™ Hypershell™ HTRO-8038/48 element	260 (24.2)	48	80 (18.2)
FilmTec™ Hypershell™ HTRO-4040/48 element	55 (5.1)	48	30 (6.8)

Dimensions – inches (mm)		
FilmTec™ Hypershell™		
	HTRO-8038/48	HTRO-4040/48
A	38 (965)	40 (1,016)
B	7.9 (201)	3.9 (99)
C	1.125 ID (28.58)	0.75 OD (19)
D		1.03 (26)

ID = Inner Diameter
OD = Outer Diameter
1 inch = 25.4 mm

Element Dimensions

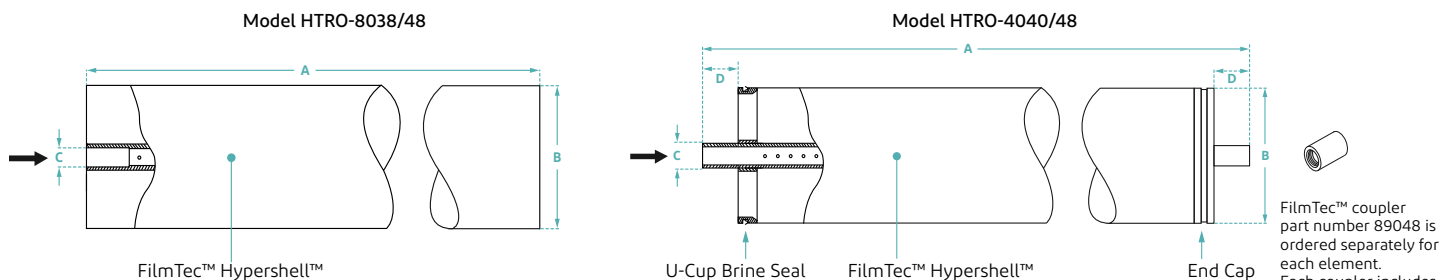

1. FilmTec™ Hypershell™ 8-inch Elements are designed to fit schedule 40, 8-inch stainless pipe (nominal 7.98-inch ID).
2. FilmTec™ Hypershell™ 4-inch Elements are designed to fit schedule 80, 4-inch stainless pipe (nominal 3.83-inch ID).
3. For 8038 models, end caps, coupler, and O-rings are not included.

Suggested Operating and Cleaning Conditions

Maximum Operating Temperature ¹	pH 3 – 8 at ≤ 80°C (176°F) pH 2 – 11 at ≤ 45°C (113°F)
Maximum Operating Pressure	1,200 psi (83 bar) at ≤ 45°C / 435 psi (30 bar) at ≤ 80°C
Maximum Pressure Drop	
Per Element	13 psi (0.9 bar) at < 50°C / 4.4 psi (0.3 bar) at < 80°C
Per Pressure Vessel	60 psi (4.1 bar) at < 50°C / 17 psi (1.2 bar) at < 80°C
pH Range	2 - 11
Hydrogen peroxide usage limit ²	
Continuous Operation	20 ppm
Short-Term Cleaning (77°F/25°C maximum)	1,000 ppm
Free Chlorine Tolerance ³	Below Detectable Limits
CIP pH Range ⁴	pH 1.8 – 11 at 45 – 50°C pH 1 – 13 at < 45°C

1. See Figure 2, maximum allowed temperature and pressure for FilmTec™ Hypershell™ HTR0-8038/48 and FilmTec™ Hypershell™ HTR0-4040/48.
2. Refer to [Sanitizing RO&NF Membrane System](#) (Form No. 45-D01630-en).
3. Oxidation damage is not covered under warranty, DuPont recommends removing residual free chlorine by pretreatment prior to membrane exposure. Please refer to [Dechlorinating Feedwater](#) (Form No. 45-D01569-en) for more information.
4. Refer to [Food Processing and Sanitary Elements Cleaning Guide](#) (Form No. 45-D01686-en). And to [Temperature and pH best practices in preparation of Cleaning Solutions](#) (Form No. 45-D04358-en).

Operating Temperature and Pressure Limits

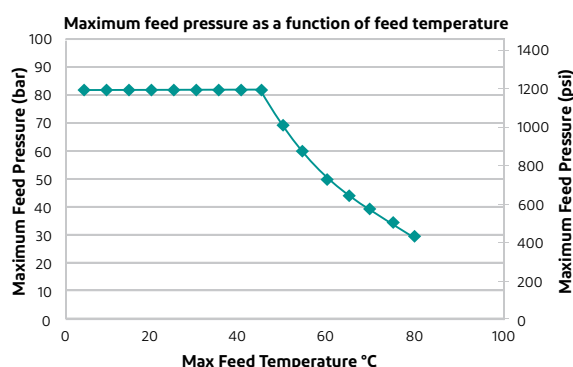


Figure 2: Maximum allowed temperature and pressure for FilmTec™ Hypershell™ HTR0-8038/48 and FilmTec™ Hypershell™ HTR0-4040/48

Important General Information

- Keep elements moist at all times after initial wetting.
- For successful operation of Reverse Osmosis (RO) and Nanofiltration (NF) membrane systems, the operation must follow the guidelines provided in the [FilmTec™ Reverse Osmosis / Nanofiltration Elements Operation Excellence and Limiting Conditions Tech Fact](#) (Form No. 45-D04388-en).
- To prevent biological growth during prolonged system shutdowns, it is recommended that membrane elements be immersed in a preservative solution.
- The customer is fully responsible for the effects of incompatible chemicals and lubricants on elements.
- Avoid static permeate-side backpressure at all times.
- Permeate obtained from the first hour of operation should be discarded.
- The use of this product in and of itself does not necessarily guarantee the removal of cysts and pathogens from water. Effective cyst and pathogen reduction is dependent on the complete system design and on the operation and maintenance of the system.

Please consider good operating practices for the optimal performance of the Nanofiltration membrane elements to assure damage free operation:

1. [Loading of Pressure Vessels – Preparation & Element Loading](#) (Form No. 45-D01602-en)
2. System Operation, including plant [Start-Up Sequence](#) (Form No. 45-D01609-en) and [RO & NF Systems Shutdown](#) (Form No. 45-D01613-en)
3. [Handling, Preservation, and Storage](#) (Form No. 45-D03716-en)

Full information of plant design, system operation, and troubleshooting is given in the [FilmTec™ Reverse Osmosis Membranes Technical Manual](#) (Form No. 45-D01504-en).

Regulatory Note

This product may be subject to drinking water application restrictions in some countries; please check the application status before use and sale.

All information set forth herein is for informational purposes only. This information is general information and may differ from that based on actual conditions. Customer is responsible for determining whether products and the information in this document are appropriate for Customer's use and for ensuring that Customer's workplace and disposal practices are in compliance with applicable laws and other government enactments. The product shown in this literature may not be available for sale and/or available in all geographies where DuPont is represented. The claims made may not have been approved for use in all countries. Please note that physical properties may vary depending on certain conditions and while operating conditions stated in this document are intended to lengthen product lifespan and/or improve product performance, it will ultimately depend on actual circumstances and is in no event a guarantee of achieving any specific results. DuPont assumes no obligation or liability for the information in this document. References to "DuPont" or the "Company" mean the DuPont legal entity selling the products to Customer unless otherwise expressly noted. NO WARRANTIES ARE GIVEN; ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY EXCLUDED. No freedom from infringement of any patent or trademark owned by DuPont or others is to be inferred.

DuPont™, the DuPont Oval Logo, and all trademarks and service marks denoted with ™, SM or ® are owned by affiliates of DuPont de Nemours Inc. unless otherwise noted. © 2025 DuPont. All rights reserved.

Form No. 45-D01737-en, Rev. 7
January 2025



Have a question? Contact us at:
[dupont.com/water/contact-us](https://www.dupont.com/water/contact-us)