



## Product Data Sheet

### DuPont™ IntegraFlux™ Ultrafiltration Modules

Model SFP-2860XP, SFD-2860XP, SFP-2880XP and SFD-2880XP

#### Description

DuPont™ IntegraFlux™ Ultrafiltration (UF) modules with XP fiber are made from high permeability, high mechanical strength, hollow fiber PVDF membranes. The modules provide excellent performance, industry leading membrane area with low energy and chemical consumption. IntegraFlux™ modules have the following general properties and characteristics:

- Up to 35% higher permeability than previous generation modules helping to improve operating efficiencies and productivity
- 0.03 μm nominal pore diameter for removal of bacteria, viruses, and particulates including colloids to protect downstream processes such as RO
- PVDF polymeric hollow fibers for high mechanical strength with excellent chemical resistance providing long membrane life and reliable operation
- Outside-In flow configuration allowing a wide range of solids in the feed water minimizing the need for pretreatment processes and reducing the backwash volume compared to Inside-Out configurations

These modules are an excellent choice for systems with capacities greater than 50 m<sup>3</sup>/hr (220 gpm). The shorter SFP-2860XP or SFD-2860XP modules are well suited for installations with limited height. Larger and longer, 8 inch diameter and 80 inch in length, the SFP-2880XP or SFD-2880XP modules offer a high effective membrane area combined with high permeability that provides the most economical and efficient membrane system design.

IntegraFlux™ Ultrafiltration Modules can be used for a wide variety of treatment applications such as industrial and municipal wastewaters, surface water, and seawater.




#### Typical Properties

Product	Type	Membrane Area		Volume		Weight (empty/water filled)	
		m <sup>2</sup>	ft <sup>2</sup>	liters	gallons	kg/lbs	kg/lbs
SFP-2860XP	Industrial	51	549	35	9.3	48/83	106/183
SFD-2860XP	NSF/ANSI 61 and 419	51	549	35	9.3	48/83	106/183
SFP-2880XP	Industrial	77	829	39	10.3	61/100	135/220
SFD-2880XP	NSF/ANSI 61 and 419	77	829	39	10.3	61/100	135/220

## Dimensions

SFP-2860XP, SFD-2860XP, SFP-2880XP, and SFD-2880XP (8-inch diameter)

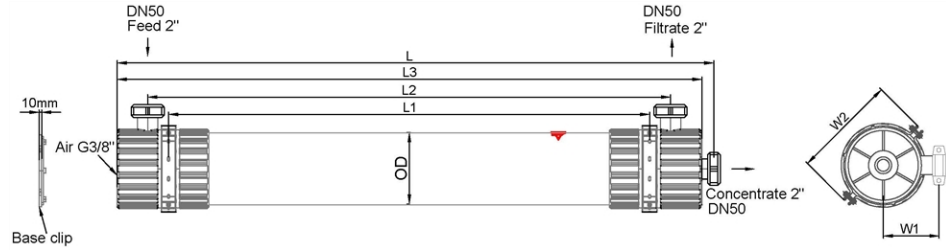

Product	Units	Length				Diameter	Width	
		L	L1	L2	L3	D	W1	W2
SFP-2860XP and SFD-2860XP	SI (mm)	1860±3	1500	1630±3	1820±3	225	180	342
	US (inch)	73.2±0.1	59.1	64.2±0.1	71.7±0.1	8.9	7.1	13.5
SFP-2880XP and SFD-2880XP	SI (mm)	2360±3	2000	2130±3	2320±3	225	180	342
	US (inch)	92.9±0.1	78.7	83.9±0.1	91.3±0.1	8.9	7.1	13.5

## Suggested Operating Conditions

	SI Units	US Units
Filtrate Flux (25°C)	40 – 110 l/m <sup>2</sup> hr	24 – 65 gfd
Flow Range Per Module <sup>1</sup>	2.0 – 8.5 m <sup>3</sup> /hr	8.8 – 37.4 gpm
Temperature	1 – 40°C	34 – 104°F
Maximum Inlet Module Pressure (20°C)	6.25 bar	90.65 psi
Maximum Inlet Module Pressure (40°C)	4.75 bar	68.89 psi
Maximum Operating TMP	2.1 bar	30.5 psi
Maximum Operating Air Scour Flow	12 Nm <sup>3</sup> /hr	7.1 scfm
Maximum Backwash Pressure	2.5 bar	36 psi
Operating pH	2 – 11	
Maximum NaOCl	2,000 mg/L	
Maximum Particle Size	300 µm	
Flow Configuration	Outside in, dead end flow	
Expected Filtrate Turbidity	≤ 0.1 NTU	
Expected Filtrate SDI	≤ 2.5	

<sup>1</sup> Flow range represents DuPont™ Ultrafiltration SFP-2860XP, SFD-2860XP, SFP-2880XP, and SFD-2880XP Modules for filtrate flux range shown

## Important Information

Proper start-up of an ultrafiltration system is essential to prepare the membranes for operating service and to prevent membrane damage. Following the proper start-up sequence also helps ensure that system operating parameters conform to design specifications so that system water quality and productivity goals can be achieved.

Before initiating system start-up procedures, membrane pretreatment, installation of the membrane modules, instrument calibration and other system checks should be completed.

Please refer to the Ultrafiltration Technical Manual (Form No. 45-D00874-en).

**Operation Guidelines**

Avoid any abrupt pressure variations during start-up, shutdown, cleaning or other sequences to prevent possible membrane damage. Flush the ultrafiltration system to remove shipping solution prior to start-up. Remove residual air from the system prior to start-up. Manually start the equipment. Depending on the application, filtrate obtained from initial operations should be discarded.

Please refer to the Ultrafiltration Technical Manual (Form No. 45-D00874-en).

**General Information**

- If operating limits and guidelines given in this bulletin are not strictly followed, the limited warranty will be null and void.
- To control biological growth during extended system shutdowns, it is recommended that storage solution be injected into the membrane modules.

Please refer to the Ultrafiltration Technical Manual (Form No. 45-D00874-en) and Technical Service Bulletins.

**Product Stewardship**

DuPont has a fundamental concern for all who make, distribute, and use its products, and for the environment in which we live. This concern is the basis for our product stewardship philosophy by which we assess the safety, health, and environmental information on our products and then take appropriate steps to protect employee and public health and our environment. The success of our product stewardship program rests with each and every individual involved with DuPont products—from the initial concept and research, to manufacture, use, sale, disposal, and recycle of each product.

**Customer Notice**

DuPont strongly encourages its customers to review both their manufacturing processes and their applications of DuPont products from the standpoint of human health and environmental quality to ensure that DuPont products are not used in ways for which they are not intended or tested. DuPont personnel are available to answer your questions and to provide reasonable technical support. DuPont product literature, including safety data sheets, should be consulted prior to use of DuPont products. Current safety data sheets are available from DuPont.

Please be aware of the following:

- The use of this product in and of itself does not necessarily guarantee the removal of cysts and pathogens from water. Effective cyst and pathogen reduction is dependent on the complete system design and on the operation and maintenance of the system.

**Regulatory Note**

NSF/ANSI 61 and 419 certified drinking water modules require specific conditioning procedures prior to producing potable water. Please refer to the Ultrafiltration Technical Manual (Form No. 45-D00874-en) flushing section for specific procedures. Drinking water modules may be subjected to additional regulatory restrictions in some countries. Please check local regulatory guidelines and application status before use and sales.

**Have a question? Contact us at:**

[www.dupont.com/water/contact-us](http://www.dupont.com/water/contact-us)

All information set forth herein is for informational purposes only. This information is general information and may differ from that based on actual conditions. Customer is responsible for determining whether products and the information in this document are appropriate for Customer's use and for ensuring that Customer's workplace and disposal practices are in compliance with applicable laws and other government enactments. The product shown in this literature may not be available for sale and/or available in all geographies where DuPont is represented. The claims made may not have been approved for use in all countries. Please note that physical properties may vary depending on certain conditions and while operating conditions stated in this document are intended to lengthen product lifespan and/or improve product performance, it will ultimately depend on actual circumstances and is in no event a guarantee of achieving any specific results. DuPont assumes no obligation or liability for the information in this document. References to "DuPont" or the "Company" mean the DuPont legal entity selling the products to Customer unless otherwise expressly noted. **NO WARRANTIES ARE GIVEN; ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY EXCLUDED.** No freedom from infringement of any patent or trademark owned by DuPont or others is to be inferred.

© 2022 DuPont. DuPont™, the DuPont Oval Logo, and all trademarks and service marks denoted with ™, SM or ® are owned by affiliates of DuPont de Nemours Inc., unless otherwise noted.

