


# DuPont™ Vespel® CR-6100 Pump Wear Components

## APPLICATION SUMMARY

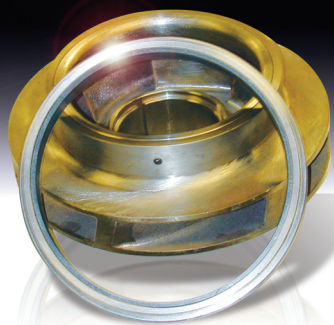

### Product Description

Vespel® CR-6100 wear components are based on an advanced composite material consisting of a high performance Teflon® PFA fluorocarbon resin and oriented carbon fibers (PFA/CF Reinforced Composite, 20 wt% random x-y oriented carbon-fiber). The patented manufacturing process creates parts which exhibit:

- Excellent dimensional stability
- Proven run-dry performance
- High temperature serviceability (up to 500°F [260°C])
- Broad chemical compatibility
- Machining ease and assembly installation

Vespel® CR-6100 wear components have been successfully used in thousands of centrifugal pumps in major refineries, chemical plants, power plants, pipeline terminals, and municipal water utilities.

### Why Use Vespel® CR-6100?

***Pump performance and reliability are significantly improved.***

- Because Vespel® CR-6100 is non-metallic, has a low coefficient of friction, and excellent dimensional stability, it can withstand short-duration off-design conditions such as start-up, slow-rolling, low-flow, cavitation, or run-dry situations. The pump remains available for service, resulting in potentially lower repair costs.
- With these characteristics, clearance at wear components can be reduced. This results in efficiency gains which lead to significant operating cost reductions, particularly when applied to populations of pumps.
- Improved reliability: Pumps with reduced clearance also exhibit lower vibration levels and reduced cavitation. Seals and bearings last longer, and MTBR increases.

*Example: One customer installed Vespel® CR-6100 wear rings, throat bushings, and pressure reducing bushings in two multistage gasoline shipping pumps. This conversion resulted in a 7% efficiency gain and a 90% reduction of overall vibration levels. The pumps have been in service over four years without failure, where the previous MTBR was 12 months.*

***Vespel® CR-6100 offers improved performance vs. other wear ring materials.***

- Vespel® CR-6100 is based on a fluoropolymer, which gives it broad chemical resistance and a low coefficient of friction. These characteristics coupled with its high temperature resistance and low thermal growth make Vespel® CR-6100 a suitable candidate for a wide range of applications.
- The durability of Vespel® CR-6100 aids installation and machining, and stays tough during operation.



*The miracles of science™*



## Where to Use Vespel® CR-6100

DuPont™ Vespel® CR-6100 is used for I.D.-mounted (in compression) wear components in nearly all centrifugal pump types in non-abrasive process services up to 500°F (260°C).

### Pump Services

Vespel® CR-6100 has been used in thousands of pumps in a broad range of hydrocarbon, chemical and water services. Some applications include:

- Boiler feed
- Condensate
- Propane
- Butane
- Ethylene
- LPG
- Diesel
- Gas oil
- Sour water
- Naphtha
- Gasoline
- MEA
- DEA
- Sulfuric acid
- Ammonia
- Hydrofluoric acid
- Caustic
- Lube oil

Applications are not limited to those listed.

### Pump Components

- Wear rings
- Throat bushings
- Pressure-reduced bushings
- Line shaft bearings
- Inter-stage bearings

### Pump Types

- Overhung horizontal
- Vertical
- Between bearings
- Multistage



Vespel® CR-6100 is fast and easy to machine.

**Phone:** 800-222-VESP (8377)  
**Fax:** 302-999-2311  
**E-mail:** [web-inquiries.DDF@usa.dupont.com](mailto:web-inquiries.DDF@usa.dupont.com)  
**Web:** [vespel.dupont.com](http://vespel.dupont.com)  
[pumps.vespel.dupont.com](http://pumps.vespel.dupont.com)

*The data listed here fall within the normal range of properties, but they should not be used to establish specification limits nor used alone as the basis of design. The DuPont Company assumes no obligations or liability for any advice furnished or for any results obtained with respect to this information. All such advice is given and accepted at the buyer's risk. The disclosure of information herein is not a license to operate under, or a recommendation to infringe, any patent of DuPont or others. Since DuPont cannot anticipate all variations in actual end-use conditions, DuPont makes no warranties and assumes no liability in connection with any use of this information.*

**CAUTION:** This product is not permitted to be sold for use in medical applications involving any implantation in the human body or where contact with internal body fluids or tissues will equal or exceed 24 hours. For applications involving contact of less than 24 hours, see "DuPont Medical Caution Statement" H-50102 or contact your DuPont sales representative.

*Copyright © 2008 DuPont. The DuPont Oval Logo, DuPont™, The miracles of science™, Teflon®, and Vespel® are registered trademarks or trademarks of E.I. du Pont de Nemours and Company or its affiliates. All rights reserved.*

*K-16378-1 (05/08) Printed in the U.S.A.*



**The miracles of science™**